

Printing on Banner Paper

About printing on banner paper

This machine accommodates paper with a length of up to 47-1/4 inches (1200 mm) in the **Bypass Tray**.




Printable paper

Paper width	Paper length	Paper weight
3-9/16 to 11-11/16 inches (90 mm to 297 mm)	18 to 47-1/4 inches (457.3 mm to 1200 mm)	<p>33-13/16 to 55-7/8 lb (127 g/m² to 210 g/m²)</p> <p>Using the printer driver, select the paper type appropriate for the weight of the banner paper to be used.</p> <ul style="list-style-type: none">❑ 32-3/16 to 41-3/4 lb (121 g/m² to 157 g/m²): Thick 1+, Thick 1+ (Side 2)❑ 42 to 55-5/8 lb (158 g/m² to 209 g/m²): Thick 2, Thick 2 (Side 2)❑ 55-7/8 lb (210 g/m²): Thick 3, Thick 3 (Side 2)

How to print on banner paper


Specify the banner paper size.

1. On the screen of this machine, tap [Utility] - [Banner Printing].
2. Select [Allow], and tap [OK].
3. Check that the system is changed to the banner print job wait state.

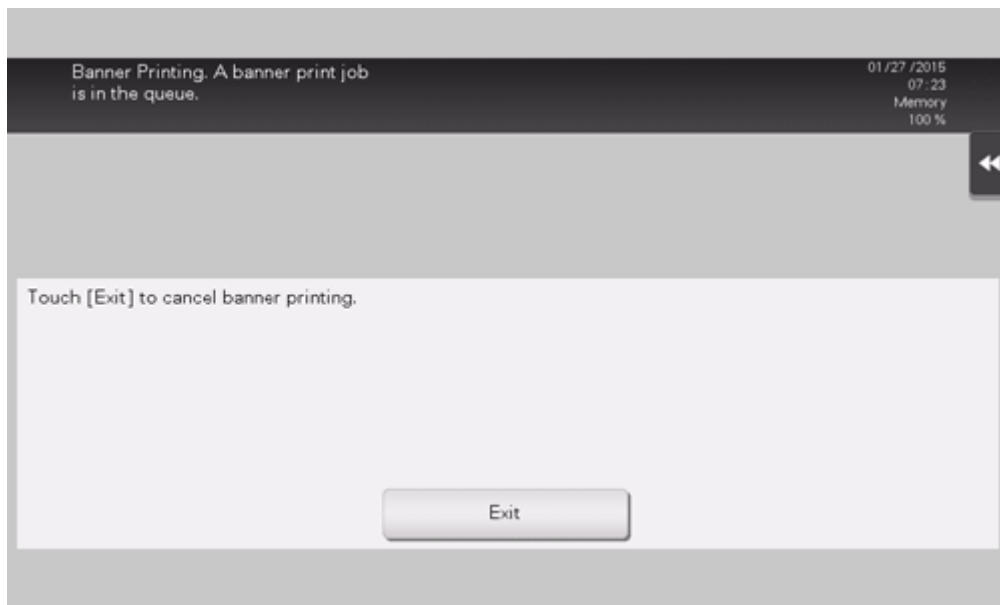


When you have finished the above settings, start to print from the PC.

4. In [Original Size] in the [Basic] tab, select [Custom Size].

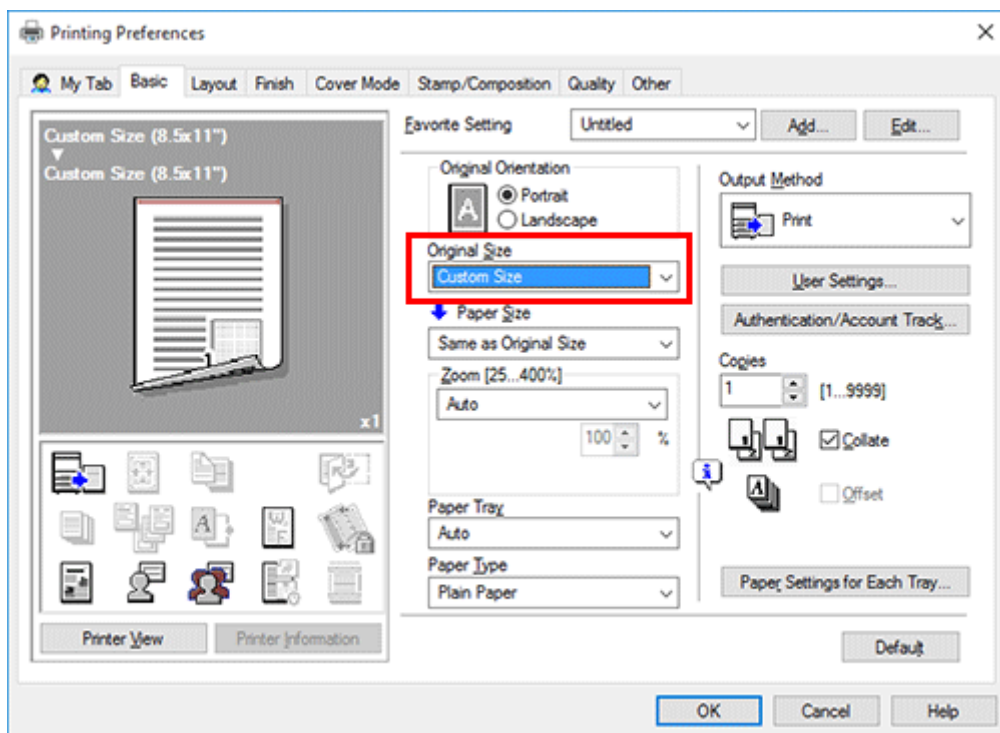

5. Specify the length and width of the banner paper, and click [OK].

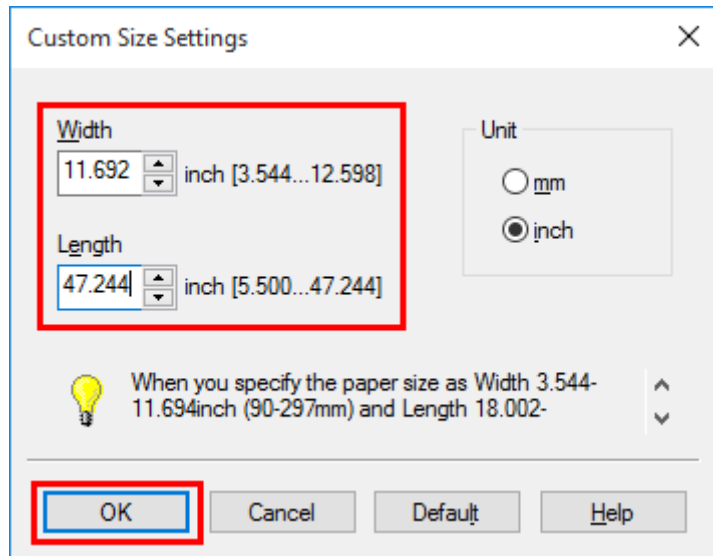

The [Confirm setting changes] dialog box appears.

6. Click [Yes].

The [Paper Tray], [Paper Type], and [Print Type] settings are switched.

- ➔ Change the setting of [Paper Type] for **Bypass Tray** according to the weight of print paper.
- ➔ If [Resolution] is set to [1200dpi (Rasterize on Device)], it is switched to [600dpi].


7. Execute printing.

A message that prompts you to load paper is displayed on the screen of this machine.

8. Load the banner paper into the **Bypass Tray**.

- ➔ For information on how to load banner paper into the **Bypass Tray**, refer to [Here](#).

9. When you have loaded a banner paper, tap [Complete].

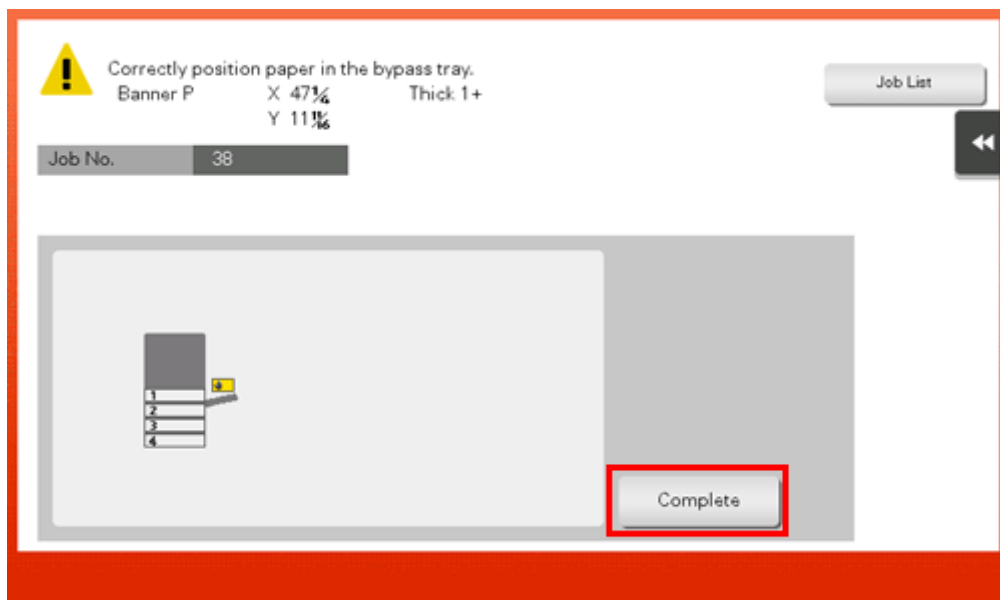

Printing on the banner paper starts. Support the ejected banner paper by hand. To continue printing, execute printing from the computer.

10. Tap [Exit].

A message confirming the end of banner printing is displayed. To terminate printing, tap [Yes].

➡ If there is a queued job, the job is started.