

## Fax Function

### *Can't normally use the fax*

1. Check the display screen for errors or status messages
2. Try to restart the Copier
3. Check the fax line is connect to the Line port correctly
4. Check the fax line is functioning properly
5. If you have checked the above procedures, please contact customer service 2565 8181

## 傳真功能

### *不能正常地使用傳真功能*

1. 檢查顯示幕上是否出現錯誤或狀態訊息
2. 嘗試重新啟動影印機
3. 檢查傳真線是否正確地接駁在 Line 接口
4. 檢查傳真線是否運作正常
5. 如已檢查上述程序，請致電 2565 8181 與客服聯絡