
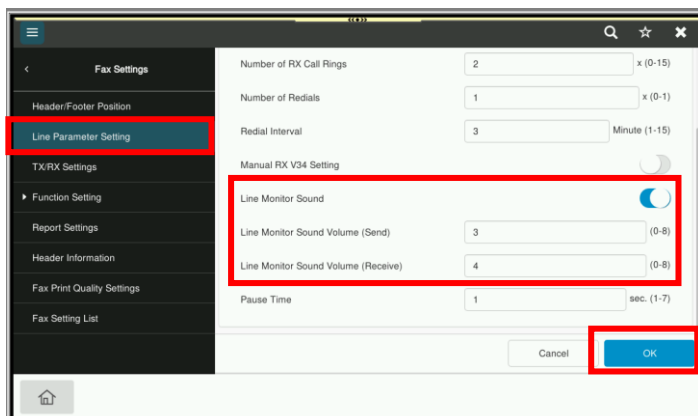



Fax Setting

Adjust the Fax Sound


1. Tap []
2. Tap [Utility]
3. Tap [Administrator]
Enter the password
4. Tap [Fax Settings]
5. Tap [Line Parameter Setting]
6. Adjust the fax volume transmission sound in [Line Monitor Sound Volume] (Send/Receive)
7. Tap [OK]



★ If don't need the fax sound, please setting to []

傳真設定

調節傳真音量

1. 按 []
2. 按 [實用功能]
3. 按 [管理者]
輸入密碼
4. 按 [傳真設定]
5. 按 [局線參數設定]
6. 在 [線路監控音量](傳送/接收)輸入音量數值
7. 按 [OK]



★ 如不需傳真聲音請設定為 []