


# Copy Setting

## Change the Default Copy setting

For Example: Default B/W color

1. Change the Current Copy Settings
2. Tap [  ]
3. Tap [Utility]
4. Tap [Utility]
5. Tap [Copier Settings]
6. Tap [Basic Setting]
7. Choose [Current Setting] in [Default Copy Setting]
8. Tap [OK]



# 複印設定

## 變更複印預設設定

例如: 預設黑色

1. 選擇所需更改的複印設定
2. 按 [  ]
3. 按 [實用功能]
4. 按 [實用功能]
5. 按 [複印機設定]
6. 按 [基本設定]
7. 在 [複印初始設定] 選擇 [現在設定]
8. 按 [OK]

