

 




Fax Setting

Delete Fax one touch from the address book

1. Tap []
2. Tap [Utility]
3. Tap [Utility]
4. Tap [Store Address]
5. Tap [Address book]
6. Choose [Fax] in [Search from Function]
7. Tap []
8. Choose the Fax destination, then touch [Delete]
9. Tap []

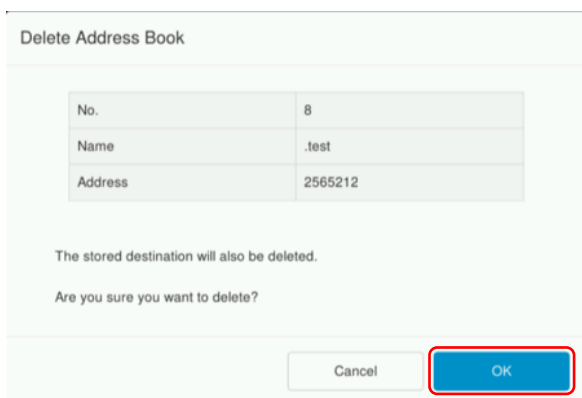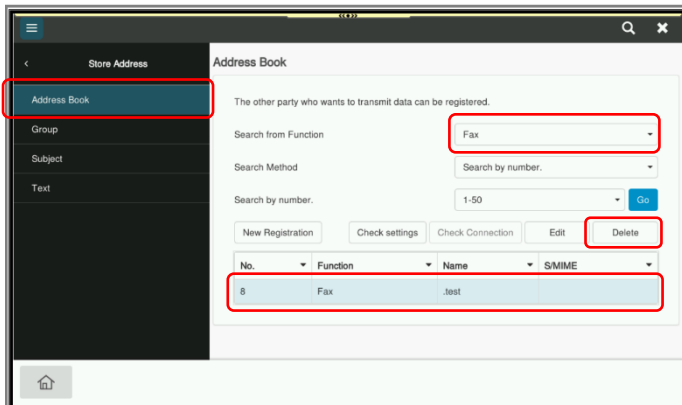

傳真設定

於地址簿刪除傳真地址

1. 按 []
2. 按 [實用功能]
3. 按 [實用功能]
4. 按 [目的地記錄]
5. 按 [預約位址]
6. 在 [自功能裡搜尋]，選擇 [傳真目的地]
7. 按 []
8. 選擇需要刪除的傳真目的地，再按[刪除]
9. 按 []

