


Password Setting

密碼設定


Export user usage through Web Connection


於網頁匯出用戶用量

1. Type in the IP address of your device into the address bar of your web browser
2. Select [Administrator] and type password and click [Login]
3. Select [Maintenance]
4. Select [Import/Export]
5. Select [Meter Count]
6. Click [Export]
7. Select [Account Track Counter] Or [User Counter]
8. Select [Export to PC]
9. Click []
10. Click [File Download]

Get Machine's IP address :

1. Touch []
2. Touch [Utility]
3. Touch [Device Information]

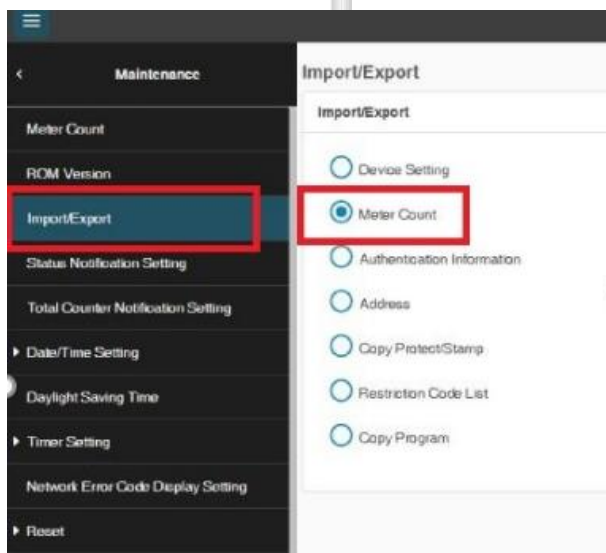

1. 在網絡瀏覽器輸入影印機的 IP address，再按 [確定] 進入 Web Connection
2. 選擇 [管理者] 輸入密碼，按 [登入]
3. 按 [定期保養]
4. 按 [匯入/匯出]
5. 按 [計數器]
6. 按 [匯出]
7. 按 [部門管理計數] 或 [使用者計數]
8. 按 [匯出到電腦]
9. 按 []
10. 按 [下載]

