 




Fax Function

Fax to Overseas

1. Load the original
2. Tap [] key
3. Specify the destination
(Touch  and type International Access Code + Country code/Territory Code + Area Code (if any) + Local Fax number)
4. Tap [ Start] key to start transmission

傳真功能

傳真至海外

1. 放置原稿
2. 按 [] 鍵
3. 輸入目的地
(按  再輸入國際接駁號碼+國家/地區號碼+區域字頭(如有)+當地傳真號碼)
4. 按 [ 啟動] 鍵開始傳真

