

Banner Printing (Part 1)

長紙張列印(第一部份)


Machine Setting


Regular banner paper size:

296mm X 1194mm (Width X Length) **OR**

296mm X 889mm (Width X Length)

Prepare Printing on Banner Paper

1. Touch [], then touch [Utility]
2. Touch [Banner Printing]
3. Touch [Allow] and [OK], to check that the screen waiting for banner printing

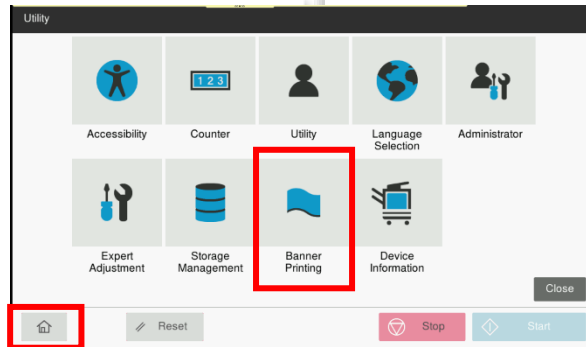

裝置設定

一般長紙尺寸：


296mm X 1194mm (寬 x 長)

或

296mm X 889mm (寬 x 長)

設定長紙張列印

1. 按 [], 再按[實用功能]
2. 按 [長紙張列印]
3. 按 [允許], 再按 [確定], 等待顯示長紙列印的畫面

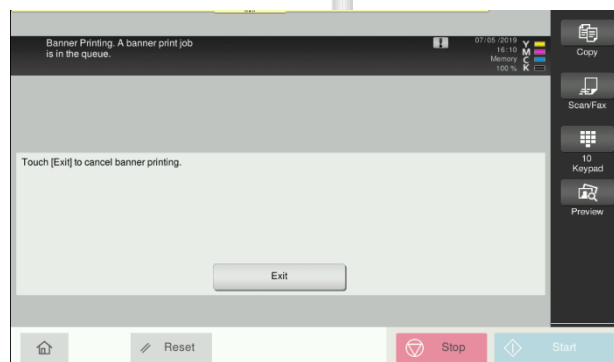

Print Function

列印功能

Banner Printing (Part 2)


長紙張列印(第二部份)

Printer Driver Setting

4. Open the file in the application and click [File], then click [Print]
5. Select machine and click [Printer Properties] or [Properties]

*Printable banner paper size range:
(Width) 210 - 296mm
(Length) 457.3 - 1200mm

6. Click [Basic]
7. Select [Custom Size] in [Original Size]
8. Input value for [Width] and [Length]
(e.g 296 X 1194mm), then click [OK]

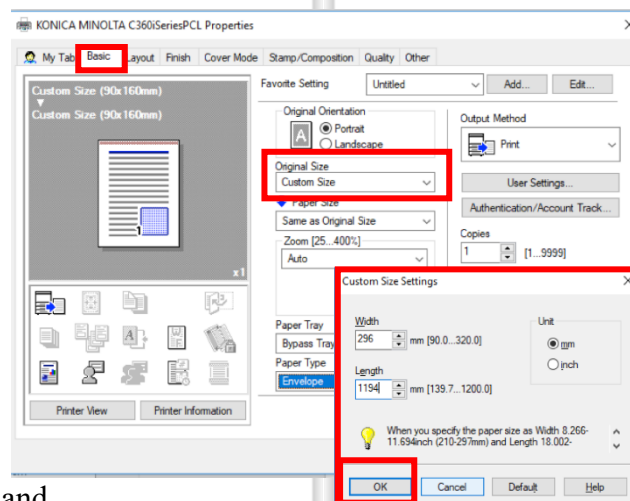

列印驅動程式設定


4. 開啟文件，選 [檔案]，再按 [列印]
5. 選擇裝置，再按[印表機內容] 或 [內容]

*長紙張列印可支援的尺寸：

寬 210-296mm
長 457.3-1200mm

6. 按 [基本的]
7. 於 [原稿尺寸] 選 [自定尺寸]
8. 輸入 [寬度] 和 [長度]
(例如：296X1194mm 再按[確定])

9. Check the paper tray and paper type settings automatically changed, then click [Yes]

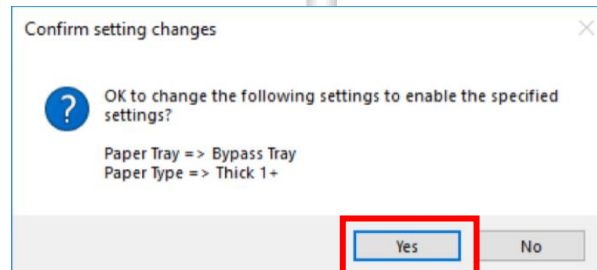

9. 確定紙張來源和紙張種類等設定已自動轉換，再按 [是]


10. Click [OK]

10. 按 [確定]

11. Click [Print]

11. 按 [列印]

12. Load banner paper on bypass tray once machine screen changed as Fig.1, and touch [Complete]

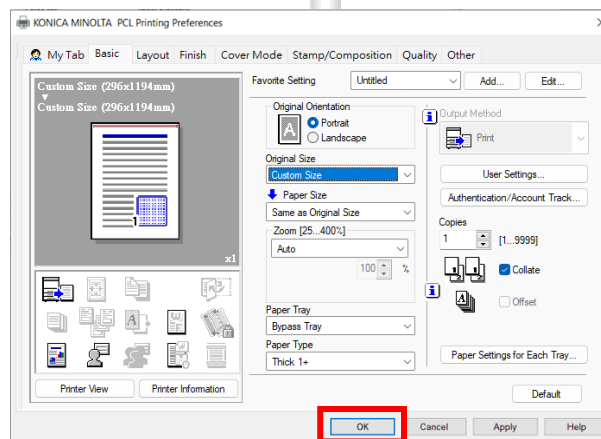

12. 當裝置屏幕顯示如 Fig.1，把長紙張放在手動送紙上，然後按 [完成]

13. When printing is finished, Touch [Exit] and then touch [Yes]

13. 當列印完成後，按 [離開]，再按 [是]

Fig.1

