


 



# Fax Setting

# 傳真設定

## Fax Forward

## 傳真轉送

1. Tap [  ]
2. Tap [Utility]
3. Tap [Administrator]  
Enter Admin password
4. Tap [Fax Settings]
5. Tap [Function Setting]
6. Tap [RX Data Operation Settings]
7. Choose [Forward TX Setting]
8. Tap [OK]
9. Set the option to [  ] in [Forward TX Setting]
10. In [Output Method], choose [Forward & Print] or [Forward & Print (If TX Fails)]
11. In [Forward Dest.], [  Select from Address Book ] and click [  ] to choose which destination to forward and receive a fax. Then Click [  ]

1. 按 [  ]
2. 按 [實用功能]
3. 按 [管理者]  
輸入管理者密碼
4. 按 [傳真設定]
5. 按 [功能設定]
6. 按 [接收資料操作設定]
7. 按 [轉傳傳送設定]
8. 按 [OK]
9. 於[轉傳傳送設定]，設定 [  ] 開啟功能
10. 在 [輸出方法] 選擇 [轉傳&列印] 或 [轉傳&列印 (傳送失敗)]
11. 在轉送地址 點 [  自地址部選擇 ] ，按 [  ] 選擇需要轉送的目的地然後按 [  ]

