




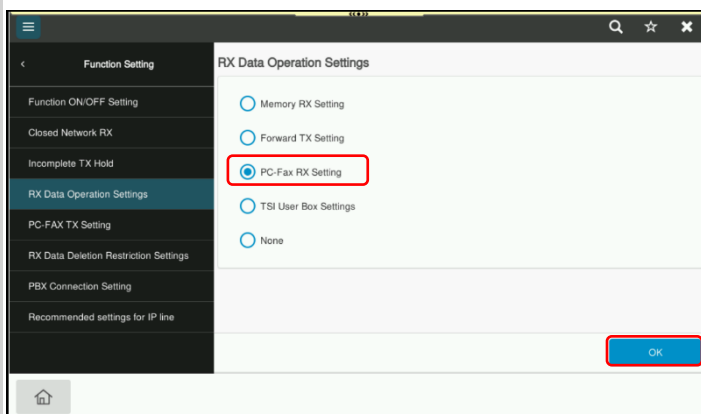


Fax Setting





Fax Forward to RX memory user box

1. Tap []
2. Tap [Utility]
3. Tap [Administrator]
Enter the Administrator password
4. Tap [Fax Setting]
5. Tap [Function Setting]
6. Tap [RX Data Operation Settings]
7. Choose [PC-Fax RX Setting]
8. Tap []
9. Select [] in [PC-Fax RX Setting]
10. Choose [Memory RX User Box]
11. Set the [Print] Function to []
12. Tap []



傳真設定

傳真轉送至記憶接收使用者信箱

1. 按 []
2. 按 [實用功能]
3. 按 [管理者]
輸入管理者密碼
4. 按 [傳真設定]
5. 按 [功能設定]
6. 按 [接收資料操作設定]
7. 按 [電腦傳真接收設定]
8. 按 []
9. 在 [電腦傳真接收設定]，選 []
10. 選擇 [記憶接收使用者信箱]
11. 設定 [列印] 為 []
12. 按 []

