

# Fax Setting

## Activity Report

1. Tap [  ]
2. Tap [Utility]
3. Tap [Administrator]  
Enter Administrator password
4. Tap [Fax Settings]
5. Tap [Report Settings]
6. Choose the setting on [Activity report]
  - ❖ [OFF]: Does not print an activity report.
  - ❖ [Daily]: Prints an activity report at the time specified in [Output Time Settings] every day.
  - ❖ [Every 100 Comm.]: Prints an activity report every 100 communications.
  - ❖ [100/Daily]: Prints an activity report at the time specified in [Output Time Settings] every day. In addition, a report is printed every 100 communications.
7. Tap [  ]

# 傳真設定

## 活動報告

1. 按 [  ]
2. 按 [實用功能]
3. 按 [管理者]  
輸入管理者密碼
4. 按 [傳真設定]
5. 按 [報表設定]
6. 在[活動報告] 中選擇
  - ❖ [關閉]: 不列印活動報告
  - ❖ [每日]: 每日在[輸出時間設定]中所指定的時間列印活動報告
  - ❖ [每一百通]: 每通訊 100 次列印一份活動報告
  - ❖ [100/每天]: 每日在[輸出時間設定]中所指定的時間列印活動報告  
每通訊 100 次也會列印一份報告
7. 按 [  ]

