

Print Function

列印功能

Secure Print

機密列印

 
 
Send secure print job

1. Open the document file
2. Click [Print] to select printer driver
3. Click [Printer Properties] / [Properties]
4. Click [Basic] → [Output Method] → [Secure Print]
****Click [User Settings] for change [Secure Print] settings if needed**
5. Input secure print ID and Password (User define), click [OK]
6. Then click [OK]
7. Execute printing

傳送機密列印工作

1. 開啟文件
2. 按 [列印]，選擇印表機
3. 按 [印表機內容] / [內容]
4. 按 [基本的]，於 [輸出方式]，選 [機密列印]
**** 如需更改 [機密列印] 設定，在 [使用者設定] 中更改**
5. 輸入文件編號和密碼(用戶自訂)，按 [確定]
6. 再按 [確定]
7. 執行列印


KONICA MINOLTA C360iSeriesPCL - 內容

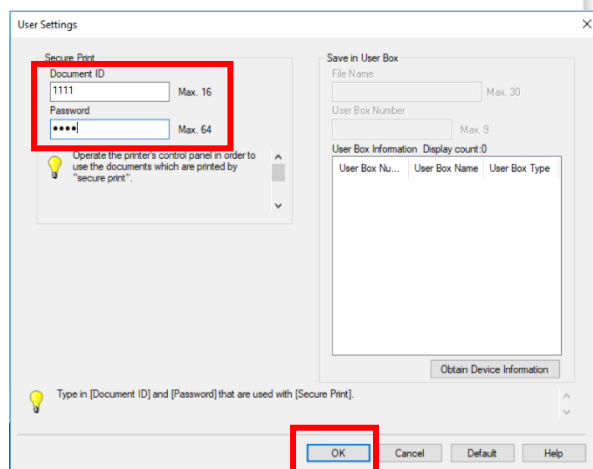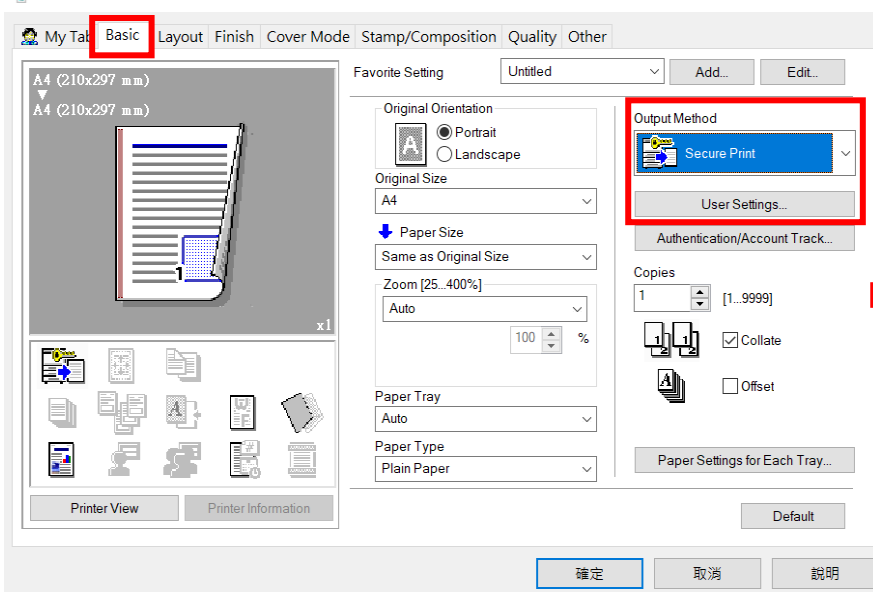


Print Function

Secure Print

Recall a job from machine

 8. Touch [] to main menu
9. Touch [User Box]
10. Touch [System]
11. Touch [Secure print]
12. Input document ID and password, then touch [OK]
13. Select secure print document, then touch [Print]
14. Touch [Start]

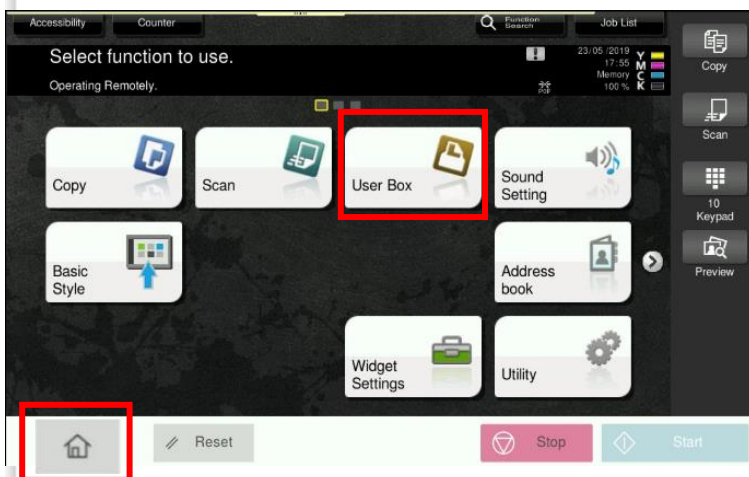

列印功能

機密列印

於裝置取回機密列印

8. 按 [] 去功能選單
9. 按 [檔案箱]
10. 按 [系統]
11. 按 [安全列印]
12. 輸入文件編號和密碼，再按 [OK]
13. 選擇文件，再按 [列印]
14. 按 [啟動]

